

Check ink levels on dye sub printer

Prolonged use of the product when the ink level is below the line on the tank could damage the printer.

* Verify on the front of the machine that the ink tank levels are not below the minimum marking. If they are, file a tool report.

- Tool report: <https://airtable.com/appbIIORImblxNU1L/shrluff2WSzy8c3xd>

Revision #1

Created 2 June 2025 15:52:49 by Bookstack Admin

Updated 2 June 2025 15:53:15 by Bookstack Admin