

Clean, Lubricate and Adjust Miter Saw

Service manual: https://drive.google.com/file/d/16HFrtwBzy-s0uS8aojnePJ2yyeupkZX2/view?usp=drive_link

Tools/Materials Required

- General purpose oil
- Light household oil (sewing machine oil)

Clean Lower Guard

1. Unplug the saw. (We want to eliminate the possibility of unexpected startup.)
2. Clean the blade guard with a damp cloth.

Warning: Do not use solvents on the guard. They could make the plastic cloudy and brittle.

Remove Sawdust

1. Wipe down the saw body with a dry cloth.
2. Vacuum all around the saw, including slides (top, behind, and under).
3. Vacuum the scoop behind the saw of any dust or chips.

Lubricate the Saw

1. Apply general purpose oil to the chop pivot.
2. Use light household oil (sewing machine oil) on metal-to-metal or metal-to-plastic contact areas on the central pivot of the plastic guard. (Lubricate as required for smooth, quiet operation. Avoid excessive oil, to which saw dust will cling.)

Revision #1

Created 2 June 2025 15:29:27 by Bookstack Admin

Updated 14 June 2025 15:10:55 by Bookstack Admin