

Clean Popcorn Maker

If the popcorn maker is already clean, you can just close out this task.

Clean Out Popcorn Compartment

1. Unplug the popcorn maker.
1. Remove any stale popcorn already in the popcorn maker.

Clean the Kettle

1. Unplug the kettle.
2. Lift the kettle up and out of the brackets.
3. Wash the kettle with soapy water. (Do not submerge the kettle.)
4. Let the kettle dry.
5. Put the kettle back on the brackets in the popcorn maker.
6. Plug in the kettle.

Revision #1

Created 2 June 2025 15:03:11 by Bookstack Admin

Updated 14 June 2025 15:10:55 by Bookstack Admin