

# Pedestal grinder - cycle the media separator

The external air filter is a gray box to the right of the pedestal grinders.

**\*Cycle the Filter\***

Using your foot, press and release the gray lever on the right side of the filter a few times to knock loose fine particles from the filter

---

Revision #1

Created 2 June 2025 15:17:55 by Bookstack Admin

Updated 14 June 2025 15:10:55 by Bookstack Admin