

Welding fume extractor - check filter

Service Fume Extractor Filter

1. Check the filter gauge at the base of the machine.
2. if the gauge indicates replacement is needed, fetch (or purchase request) a new one and swap the old one out.

- Purchase request: <https://protohaven.org/purchasing>

Revision #1

Created 2 June 2025 15:50:28 by Bookstack Admin

Updated 14 June 2025 15:10:55 by Bookstack Admin