


POWERMATIC®

Operating Instructions and Parts Manual Vertical Panel Saw Model 511

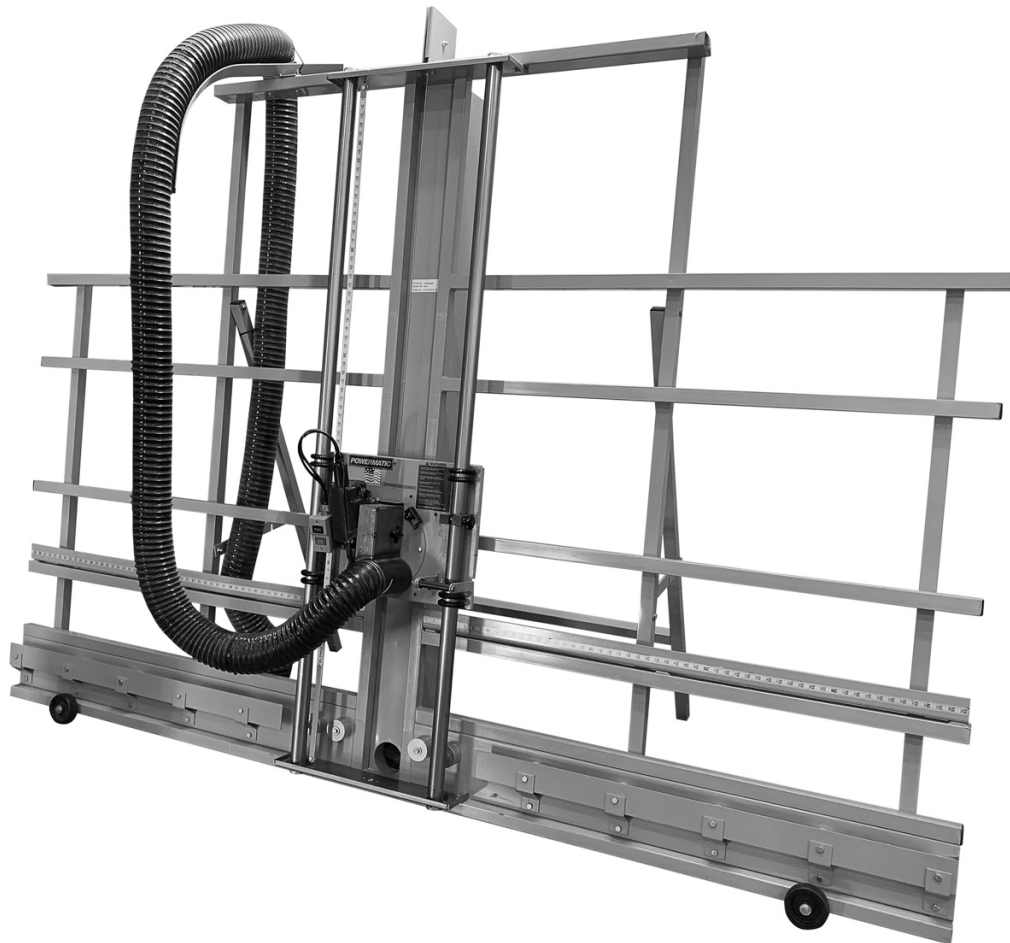

For serial number 03102023001 and higher

Powermatic

427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.powermatic.com

Part No. M-0460280

Edition 6 06/2023

Copyright © 2014 Powermatic

Warranty and service

Powermatic warrants every product it sells against manufacturers' defects. If one of our tools needs service or repair, please contact Technical Service by calling 1-800-274-6846, 8AM to 5PM CST, Monday through Friday.

Warranty Period

The general warranty lasts for the time period specified in the literature included with your product or on the official Powermatic branded website.

- Powermatic products carry a limited warranty which varies in duration based upon the product. (See chart below)
- Accessories carry a limited warranty of one year from the date of receipt.
- Consumable items are defined as expendable parts or accessories expected to become inoperable within a reasonable amount of use and are covered by a 90-day limited warranty against manufacturer's defects.

Who is Covered

This warranty covers only the initial purchaser of the product from the date of delivery.

What is Covered

This warranty covers any defects in workmanship or materials subject to the limitations stated below. This warranty does not cover failures due directly or indirectly to misuse, abuse, negligence or accidents, normal wear-and-tear, improper repair, alterations, or lack of maintenance. Powermatic woodworking machinery is designed to be used with Wood. Use of these machines in the processing of metal, plastics, or other materials may void the warranty. The exceptions are acrylics and other natural items that are made specifically for wood turning.

Warranty Limitations

Woodworking products with a Five-Year Warranty that are used for commercial or industrial purposes default to a Two Year Warranty. Please contact Technical Service at 1-800-274-6846 for further clarification.

How to Get Technical Support

Please contact Technical Service by calling 1-800-274-6846. **Please note that you will be asked to provide proof of initial purchase when calling.** If a product requires further inspection, the Technical Service representative will explain and assist with any additional action needed. Powermatic has Authorized Service Centers located throughout the United States. For the name of an Authorized Service Center in your area call 1-800-274-6846 or use the Service Center Locator on the Powermatic website.

More Information

Powermatic is constantly adding new products. For complete, up-to-date product information, check with your local distributor or visit the Powermatic website.

How State Law Applies

This warranty gives you specific legal rights, subject to applicable state law.

Limitations on This Warranty

POWERMATIC LIMITS ALL IMPLIED WARRANTIES TO THE PERIOD OF THE LIMITED WARRANTY FOR EACH PRODUCT. EXCEPT AS STATED HEREIN, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXCLUDED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. POWERMATIC SHALL IN NO EVENT BE LIABLE FOR DEATH, INJURIES TO PERSONS OR PROPERTY, OR FOR INCIDENTAL, CONTINGENT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF OUR PRODUCTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Powermatic sells through distributors only. The specifications listed in Powermatic printed materials and on the official Powermatic website are given as general information and are not binding. Powermatic reserves the right to effect at any time, without prior notice, those alterations to parts, fittings, and accessory equipment which they may deem necessary for any reason whatsoever.

Product Listing with Warranty Period

90 Days – Parts; Consumable items
1 Year – Motors, Machine Accessories
2 Year – Woodworking Machinery used for industrial or commercial purposes
5 Year – Woodworking Machinery

NOTE: Powermatic is a division of JPW Industries, Inc. References in this document to Powermatic also apply to JPW Industries, Inc., or any of its successors in interest to the Powermatic brand.

Table of contents

Warranty and service	2
Warning.....	4
General Operating Instructions	7
Operating Tips.....	7
511 Panel Saw Features.....	8
Introduction	9
Specifications	9
Installation of Panel Saw.....	10
Uncrating	10
Electrical Connections.....	10
Extension Cords.....	11
Operation	11
Operating Tips.....	11
Crosscutting	12
Ripcutting	13
Adjustments	14
Changing the Blade.....	14
Adjusting Crosscut Rulers	15
Alignment	15
Maintenance.....	17
Replacement Parts.....	18
511 Panel Saw – Exploded View I	19
511 Panel Saw – Exploded View II	20
Parts List: 511 Panel Saw	21
511 Panel Saw, Motor with Pushbutton Assembly PM1-32	22
511 Panel Saw Dust Collection System	24
Electrical Connections.....	25
Parts List: Motor Assembly.....	26

Warnings

Read and understand the entire owner's manual before attempting assembly or operation.

Read and understand the warnings posted on the machine and in this manual. Failure to comply with all of these warnings may cause serious injury.

Replace the warning labels if they become obscured or removed.

This panel saw is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper and safe operation of a panel saw, do not use until proper training and knowledge have been obtained.

Do not use this panel saw for other than its intended use. If used for other purposes, Powermatic disclaims any real or implied warranty and holds itself harmless from any injury that may result from that use.

Always wear approved safety glasses/face shields while using this panel saw. Everyday eyeglasses only have impact resistant lenses; they are not safety glasses.

Before operating this panel saw, remove tie, rings, watches, and other jewelry, and roll sleeves up past the elbows. Remove all loose clothing and confine long hair. Non-slip footwear or anti-skid floor strips are recommended. Do **not** wear gloves.

Wear ear protectors (plugs or muffs) during extended periods of operation.

Some dust created by power sanding, sawing, grinding, drilling and other construction activities contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paint.
- Crystalline silica from bricks, cement, and other masonry products.
- Arsenic and chromium from chemically treated lumber.

Your risk of exposure varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment, such as face or dust masks that are specifically designed to filter out microscopic particles.

Do not operate this machine while tired or under the influence of drugs, alcohol, or any medication.

Make certain the switch is in the **OFF** position before connecting the machine to the power supply.

Make certain the machine is properly grounded through the three-wire cord that comes with the unit.

Make all machine adjustments, blade changes or maintenance with the machine unplugged or locked out from the power source.

Remove adjusting keys and wrenches. Form a habit of checking to see that keys and adjusting wrenches are removed from the machine before turning it on.

Keep safety guards in place at all times when the machine is in use. If removed for maintenance purposes, use extreme caution, and replace the guards immediately.

Check damaged parts. Before further use of the machine, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting and any other conditions that may affect its operation. A guard or other part that is damaged should be repaired or replaced. Machine should be properly tagged until repaired.

Provide for adequate space surrounding work area and non-glare, overhead lighting.

Keep the floor around the machine clean and free of scrap material, oil, and grease.

Keep visitors a safe distance from the work area. **Keep children away.**

Make your workshop child proof with padlocks, master switches or by removing starter keys.

Give your work undivided attention. Looking around, carrying on a conversation and "horse-play" are careless acts that can result in serious injury.

Maintain a balanced stance at all times so that you do not fall or lean against the blade or other moving parts. Do not overreach or use excessive force to perform any machine operation.



Warnings

Use the right tool at the correct speed and feed rate. Do not force a tool or attachment to do a job for which it was not designed. The right tool will do the job better and safer.

Use recommended accessories; improper accessories may be hazardous.

Maintain tools with care. Keep blades sharp and clean for the best and safest performance. Follow instructions for lubricating and changing accessories.

Turn off the machine before cleaning. Use a brush or compressed air to remove chips or debris — do not use your hands.

Do not stand on the machine. Serious injury could occur if the machine tips over.

Never leave the machine running unattended. Turn the power off and do not leave the machine until it comes to a complete stop.

Remove loose items and unnecessary work pieces from the area before starting the machine.

Use common sense; keep hands away from and out from under saw carriage at all times.

Do not attempt to disassemble or repair counter-balance.

When the machine is not in use, keep the saw carriage locking knob securely tightened.

Familiarize yourself with the following safety notices used in this manual:



This means that if precautions are not heeded, it may result in minor injury and/or possible machine damage.




This means that if precautions are not heeded, it may result in serious injury or possibly even death.

- - SAVE THESE INSTRUCTIONS - -


Warnings

Familiarize yourself with the location and content of these decals on your machine.

**WARNING**


1. FOR YOUR OWN SAFETY, READ INSTRUCTION MANUAL BEFORE OPERATING SAW.
2. ALWAYS WEAR APPROVED EYE PROTECTION WHILE OPERATING THIS SAW.
3. USE SAW BLADE GUARD AND SPREADER FOR EVERY OPERATION INCLUDING THROUGH SAWING.
4. DO NOT CUT MATERIAL SMALLER THAN MOTOR CARRIAGE.
5. DO NOT USE PUSH STICK.
6. KEEP HANDS AWAY FROM SAW BLADE AND NEVER PLACE HANDS UNDER CARRIAGE.
7. DISCONNECT POWER FROM SAW BEFORE REMOVING SAW GUARD OR MAKING ANY ADJUSTMENTS.
8. MATERIAL BEING CUT MAY KICK BACK. KEEP HANDS, BODY AND BYSTANDERS OUT OF PATH OF MATERIAL. SEE INSTRUCTIONS ON PREVENTING KICK BACK.

DO NOT REMOVE OR OBSCURE THIS LABEL

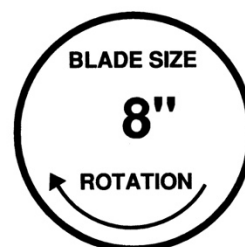

3408248

3408265

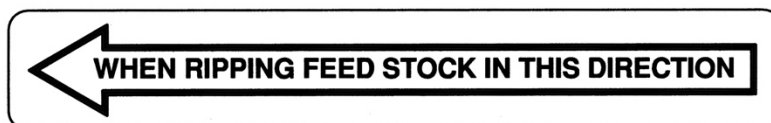

3408266

FIGURE 1

General Operating Instructions

The suggestions listed below are meant to give you a general idea of how your new Panel Saw is intended to be operated. No amount of instruction can replace good common sense and experience. Be sure the operators of your new Panel Saw are given enough time and material to become familiar with the general operating characteristics of this machine and have FULLY READ AND UNDERSTAND all general operating and safety instructions. The panel saw is pre-aligned at the factory. No assembly or adjustments are necessary.

NOTE: When your Panel Saw is located in position for operation, secure the machine in a manner that will prevent it from being tipped over.

Operating Tips

1. If you expect smooth, clean, chip-free cuts, follow these tips:
 - Use industrial carbide saw blades which are SHARP. Dull blades or improperly sharpened blades will cause chipping, unclean cuts, chatter and will overload the saw motor.
 - **NOTE:** ALWAYS USE A SHARP SAW BLADE. IF IN DOUBT REPLACE IT WITH A NEW BLADE.
 - Feeding the material through the machine horizontally or moving the saw carriage through the material vertically MUST BE DONE SLOWLY, SMOOTHLY AND WHENEVER POSSIBLE WITHOUT STOPPING. Overfeeding will result in poor quality cuts, shorten the life of the carbide saw blades and overload the saw motor.
2. Caution must be used when setting material onto the material roller carriage. Heavy material MUST NOT BE DROPPED ONTO THE ROLLER CARRIAGE. Failure to follow this rule will ultimately cause the roller carriage to be pounded out of alignment.
3. For best results place material to be cut onto the Panel Saw with the back side facing the operator. This will provide the smoothest possible cut on the face side of the panel.
4. Panels being cut horizontally (ripping) must always be fed *against* the rotation of the saw blade.
5. Do not force the saw. It will perform better and can be more easily controlled if allowed to work at the rate for which it was designed.
6. If the saw is stopped in mid-cut, allow the blade to stop. Then back up the saw (if crosscutting) or the board (if ripping) and restart the saw to continue the cut.
7. Thin material, such as paneling, should be properly supported over its length to prevent binding in the blade.
8. Panel Saws are designed to cut large panels down to size. As the overall panel size becomes smaller and smaller other types of sawing machines can become more convenient and safer to use.

511 Panel Saw Features

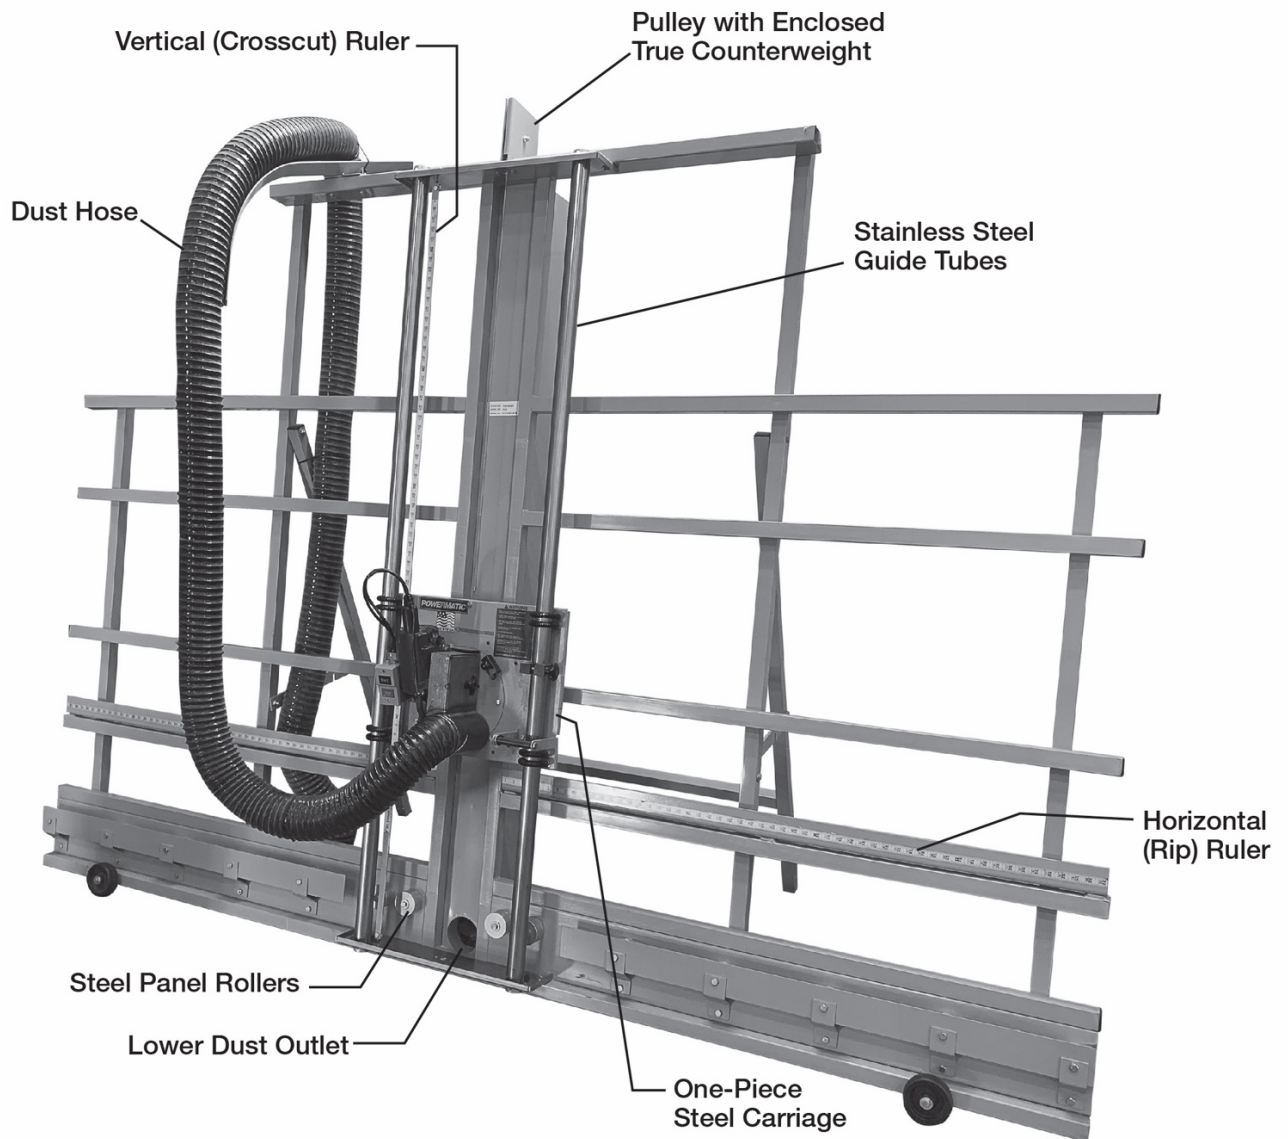


Figure 2

Introduction

This manual is provided by Powermatic, covering the safe operation and maintenance procedures for a Model 511 Vertical Panel Saw. This manual contains instructions on installation, safety precautions, general operating procedures, maintenance instructions and parts breakdown. This machine has been designed and constructed to provide years of trouble-free operation if used in accordance with instructions set forth in this manual. If there are any questions or comments, please contact either your local supplier or Powermatic. Powermatic can also be reached at our web site: www.powermatic.com.

Specifications

Model Number.....	511
Stock Number	1510007
Panel Capacity	10 feet
Maximum Crosscut Length (in.)	62
Maximum Rip Length	Unlimited
Maximum Cut Thickness (in.).....	1-1/2
Cut Accuracy, Straight and Square (in.).....	1/64
Saw Blade Diameter (in.) (saw blade is not included).....	8
Power Requirements.....	120V, 15 Amps
Footprint (L x W x H) (in.).....	120 x 39 x 90
Net Weight (lbs.)	435
Shipping Weight (lbs.).....	500

The above specifications were current at the time this manual was published, but because of our policy of continuous improvement, Powermatic reserves the right to change specifications at any time and without prior notice, without incurring obligations.

Installation of Panel Saw

Uncrating

Remove the panel saw from the shipping container and check for damage. Report any damage to the freight company immediately.

A wooden block and three cables are fastened to the counterweight for secure shipment. Follow the steps below to remove these items before operating saw.

1. Place the cable attached to the motor carriage over the pulley on top of the panel saw.
2. Loosen the locking knob on the motor carriage and move the carriage down to the bottom of the panel saw frame (see Figure 3). Tighten the locking knob securely.
3. On top of the counterweight housing (back of panel saw frame), lift the wood block and cut the cables attached to the block (see Figure 4). **CAUTION: DO NOT cut the main cable that runs through the pulley.**
4. Remove the cables and wood block so that the counterweight can slide freely inside the housing.

Make sure there is enough space on both sides of the panel saw frame for loading, passing, and off-loading panels.

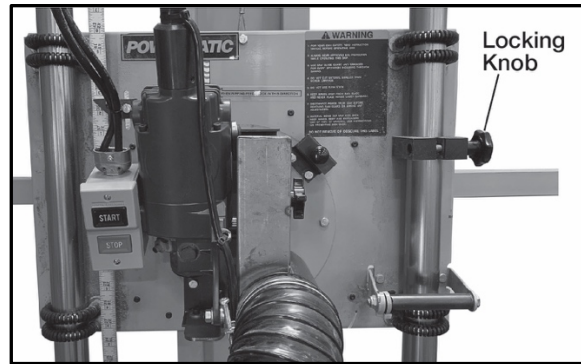


Figure 3

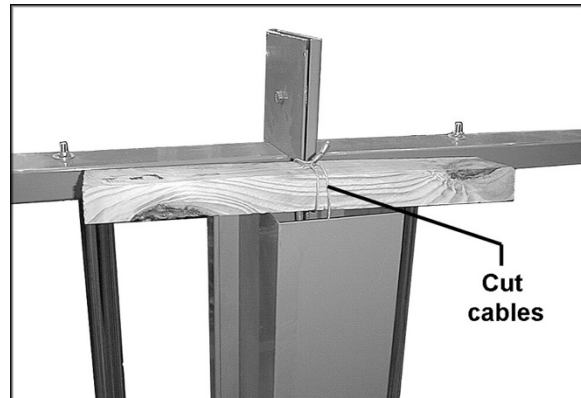


Figure 4

Electrical Connections

⚠ WARNING Electrical connections must be made by a qualified electrician in compliance with all relevant codes. This machine must be properly grounded to help prevent electrical shock and possible fatal injury.

IMPORTANT: Before connecting the saw to power source, be sure the power switch is in *off* position.

115-Volt Operation

This saw is ready for 115V operation and must be grounded. If a malfunction or breakdown occurs, proper grounding reduces the risk of electric shock. This shaper has a grounded three-prong electrical plug.

⚠ WARNING You must connect the electrical plug to a properly grounded, three-wire electrical outlet as shown in Figure 5. If you do not have a properly grounded, three-wire electrical outlet, you must contact a qualified electrician to install one. Installation must comply with all local codes and ordinances. Do not use this saw until a properly grounded, three-wire electrical outlet is installed and ready for use.

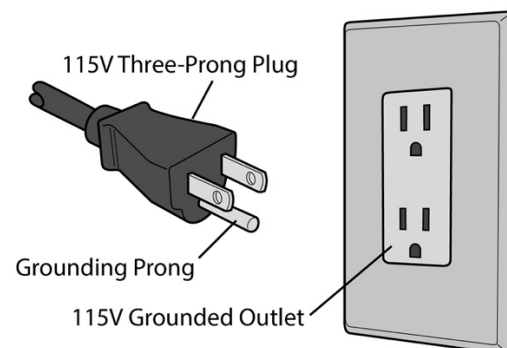


Figure 5

⚠WARNING Never use an adapter to connect the three-prong electrical plug to a non-grounded, 2-pole receptacle. Do not modify the plug provided. Improper connection of the grounding conductor can result in a risk of electric shock.

⚠WARNING Check with a qualified electrician or service person if you do not completely understand these grounding instructions or if the proper grounding of this tool is in doubt. Failure to comply may cause serious or fatal injury.

Repair or replace damaged or worn cord immediately.

Extension Cords

Grounded tools require a three-wire extension cord. As the distance from the supply outlet increases, a heavier gauge extension cord must be used. Using extension cords with inadequately sized wire causes a serious drop in voltage, resulting in loss of power and possible tool damage.

Figure 6 shows recommended gauges. The smaller the gauge number of the wire, the greater capacity of the cord (for example, a 12-gauge cord can carry a higher current than a 14-gauge cord). If one extension cord is used for more than one tool, add their nameplate amperes and use the sum to determine the required minimum wire size.

If you are using an extension cord outdoors, be sure it is marked with the suffix "W-A" ("W" in Canada) to indicate that it is acceptable for outdoor use.

Be sure your extension cord is properly wired and in good condition. Always replace a damaged cord or have it repaired by a qualified person before using it. Protect extension cords from sharp objects, excessive heat, and damp or wet areas.

Amps	Extension Cord length*					
	25 feet	50 feet	75 feet	100 feet	150 feet	200 feet
< 5	16	16	16	14	12	12
5 - 8	16	16	14	12	10	----
8 - 12	14	14	12	10	----	----
12-15	12	12	10	10	----	----
15-20	10	10	10	----	----	----

*based on limiting the line voltage drop to 5 volt at 150% of the rated amps

Figure 6

Operation

Crosscut rulers: The panel saw comes with one rip (vertical) ruler and two crosscut (horizontal) rulers. The rip ruler is preset at the factory. The crosscut rulers should be checked and, if necessary, adjusted before operating the saw. Also, they should be adjusted after every blade change. See "Adjusting Crosscut Rulers" on page 15.

Operating Tips

1. Use industrial carbide saw blades that are sharp. Dull blades may cause chipping, chatter or overloading of the motor. If you're not sure whether a blade is sharp, replace it with a new one.

2. Feed material through the saw (ripping) or lower the carriage (crosscutting) slowly, smoothly, and whenever possible without stopping. Overfeeding can result in poor quality cuts, shorten the life of the blade, and overload the motor.
3. Do not drop heavy material onto the rollers, as this will eventually pound them out of alignment.
4. For best results, place workpiece onto saw with its backside facing the operator. This provides the smoothest cut on the face side of the panel.
5. Feed workpiece against the rotation of the saw blade when making horizontal cuts (ripping).
6. Panel saws are for cutting large panels down to size. As the panel gets smaller, other types of tools become safer and more convenient to use.

Crosscutting

A crosscut is a vertical cut that is made from the top to the bottom of the workpiece. See Figure 7.

⚠WARNING Do not place hands on or under the carriage or in path of saw blade.

For safety and accuracy, the workpiece must be supported on at least two rollers while crosscutting. See Figure 7.

Here is the basic procedure for crosscutting:

1. Position the saw motor in the crosscutting position with the blade oriented vertically.
2. Loosen carriage locking knob and move carriage to the top of the guides.
3. Place the workpiece on top the rollers. DO NOT DROP it on the rollers.
4. Slide workpiece into position while double checking the cut size via the crosscut rulers. Make sure workpiece is adequately supported. Use one hand to guide it.

⚠WARNING Do not hold workpiece so that your hand is behind the carriage or guides or near the path of the blade.

5. Start motor and allow it to reach full speed.
6. Pull carriage down slowly and smoothly as the blade moves through the workpiece. Keep one hand on the handle at all times and do not force the saw.

NOTE: If the blade binds in the workpiece, or the workpiece shifts during the cut, stop the motor, return the carriage to the top of the guides, restart motor, and then begin the cut again.

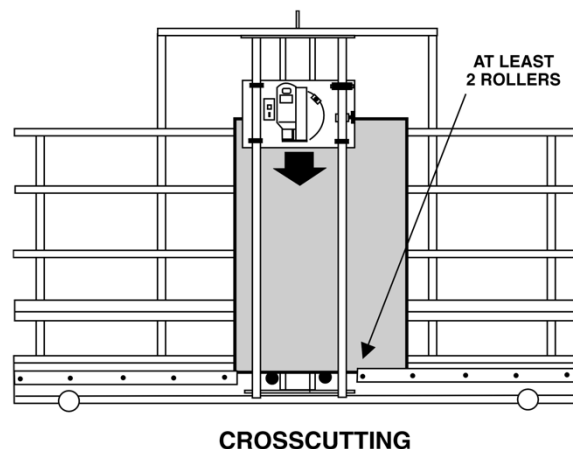


Figure 7

7. Support and remove the cut-off piece as the saw completes its cut.
8. Once the cut is complete, turn off the motor and wait for the blade to come to a full stop (NOTE: A coasting saw blade can mar the edge of a freshly cut workpiece).
9. Remove the workpieces, return the carriage to the top of the guides, and lock the carriage.

Ripcutting

A ripcut is a horizontal cut made right to left. See Figure 8. The workpiece must always be moved in the direction of the arrow on the carriage.

⚠WARNING Ripping must be done in direction of the arrow on saw carriage to prevent risk of injury.


The minimum length recommended for rip (horizontal) cuts is 2-1/2 feet, so that the workpiece can be supported by at least four rollers. Pieces shorter than 4 feet can be rotated 90 degrees and be crosscut.

Here is the basic procedure for ripcutting:

1. Make sure there is enough space on both sides of saw to completely load, pass, and offload the workpiece.
2. Pull indexing pin on turntable (Figure 9), and rotate turntable counterclockwise. The indexing pin will lock into place.
3. Select height of saw blade above the rollers. Move the carriage until the index tab is aligned with the corresponding dimension on the vertical ruler. Lock the carriage securely to the guides with the locking knob.
4. Start motor and allow it to reach full speed.
5. Place workpiece on the side of machine according to the carriage cut direction arrow. DO NOT DROP workpiece on rollers.
6. With the motor at full speed, move the workpiece slowly and smoothly through the saw. Do not force the workpiece, as it may cause binding.

NOTE: If the blade binds in the workpiece, or the workpiece shifts during the cut, stop the motor, back the workpiece out of the saw, reposition workpiece, restart motor, and then begin the cut again.

⚠WARNING Do not place hands, clothing, or body parts under carriage or in cutting path of blade. Do not look directly down line of cut as dust and debris are generated during this operation.

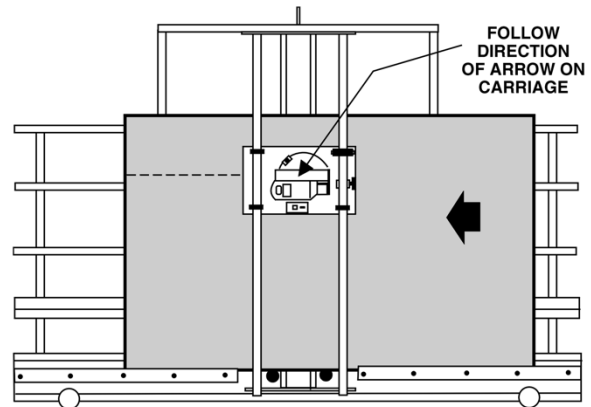

RIPCUTTING

Figure 8

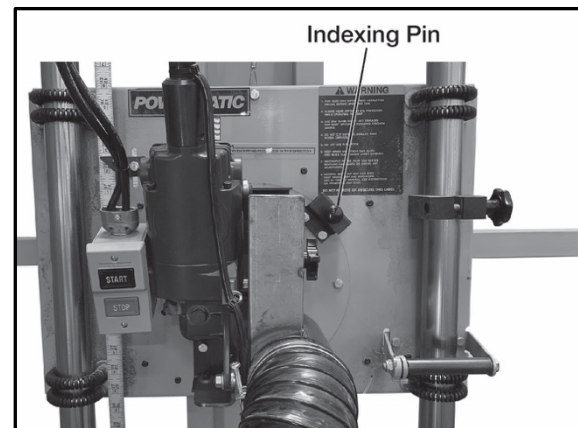


Figure 9

7. As the workpiece passes through the saw, move to the other side and complete the cut by pulling the workpiece past the blade. Support the upper piece to prevent it from pinching the blade or the kerf protector or falling away from the machine.
8. When cut is finished, turn off motor and wait for blade to come to a complete stop. Remove workpieces.
9. Rotate turntable back to vertical position and return it to the top of the guides. Lock the carriage.

Adjustments

The 511 Panel Saw is preset at the factory, so no adjustments should be necessary at first. However, certain alignments should be checked, and as the saw gets more use adjustments may be needed.

Changing the Blade

1. Disconnect saw from power source and observe appropriate lockout procedures to prevent machine from being accidentally powered.
2. Tighten carriage lock and remove the blade guard by unscrewing and removing the knob, shown in Figure 10.
3. Engage spindle lock (Figure 11) on the motor to keep spindle from turning. Use a 17mm wrench to loosen and remove the arbor bolt (NOTE: left hand threads, turn clockwise to loosen). See Figure 12.
4. Remove outer flange, blade, and inner flange. See Figure 12.
5. Clean spindle, flanges, bolts, and blade to remove dust and debris.
6. Re-install inner flange and install new blade with arrow pointing as shown in Figure 12. Reinstall outer flange and tighten arbor bolt using a 17mm wrench.
7. Re-install blade guard.
8. Loosen carriage lock and move carriage to the top of the guides. Reconnect power.



Figure 10

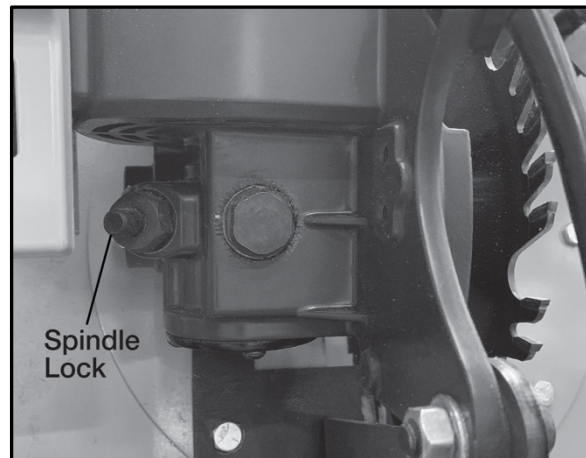


Figure 11

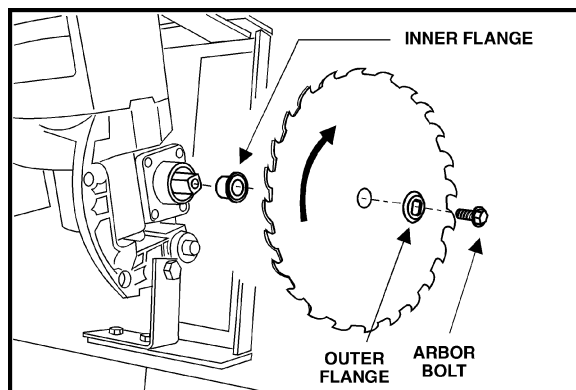


Figure 12

Adjusting Crosscut Rulers

The panel saw comes with one rip (vertical) ruler and two crosscut (horizontal) rulers. The rip ruler is preset at the factory. The crosscut rulers should be checked and, if necessary, adjusted before operating the saw. Also, they may have to be adjusted after every blade change. With the blade installed, do the following:

1. Remove blade guard.
2. Loosen carriage locking knob and lower carriage down to the rulers.
3. Using a square that measures at least 14" on one side, line up one edge of the square with the tips of the saw blade, and the other edge with the crosscut ruler. See Figure 13.
4. If these are out of square, loosen the three bolts that hold the angle bracket to which the scale is attached. Slide the angle bracket so that its measure matches the measure on the square.
5. Repeat the above steps for the crosscut ruler on the other side.
6. Make a test cut to verify that the ruler is lined up correctly.

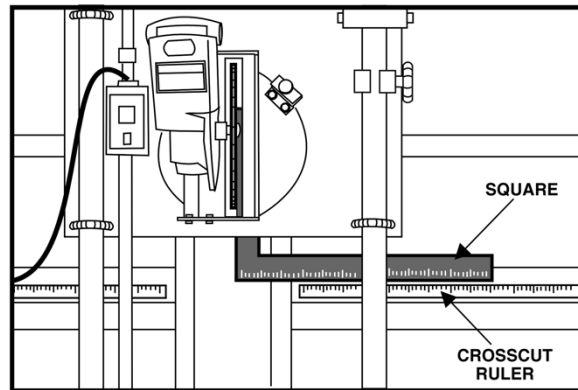


Figure 13

Alignment

If the saw ever needs realignment, it should be performed in the following order:

1. Align rollers.
2. Align guides perpendicular to rollers.
3. Align blade parallel to guides.

To ensure accuracy over the full movement of the saw, construct a test square as follows, (Figure 14):

Use a 6-foot metal ruler and two 4-foot metal rulers (using the 3-, 4-, and 5-ft. measurements ensures squareness). Drill holes and attach the rulers with pop rivets or small nuts and bolts.

The 6-foot ruler is used to check squareness of the rollers. The 4-foot ruler is used to check squareness of the guide tubes.

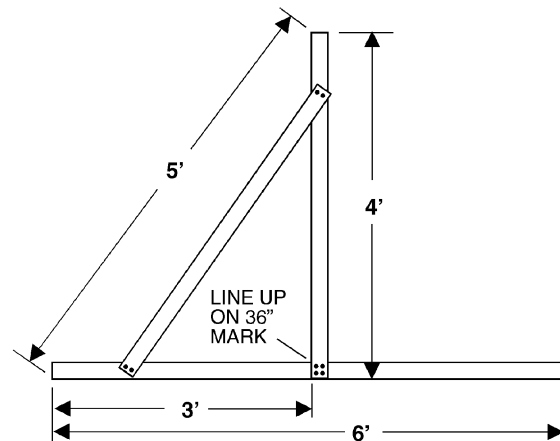


Figure 14

Step 1: Align Rollers

The two outermost rollers are fixed, so adjust all other rollers to them. Place the 6-foot edge of the square across the rollers to check for alignment. The edge of the square should touch all rollers. If it does not, adjust as follows:

1. Clamp the straightedge to the top of the outermost rollers and flat to the frame. Position the clamps above the outermost rollers.
2. Turn each roller to ensure it does not jam or have excessive clearance from the straightedge. If this occurs, loosen the roller nut, shown in Figure 15.
3. The adjustable rollers have an eccentric hub. Turning the roller when the roller nut is loose changes the position of the roller. Turn the roller until it touches the straightedge, making sure the straightedge does not bend. NOTE: The roller panel may have to be loosened in order to turn the roller. See Figure 15.
4. When the roller is positioned, tighten the roller nut. NOTE: If a fixed roller has been replaced, the above procedure should be repeated.
5. Leave the test square clamped to the rollers for the next step.

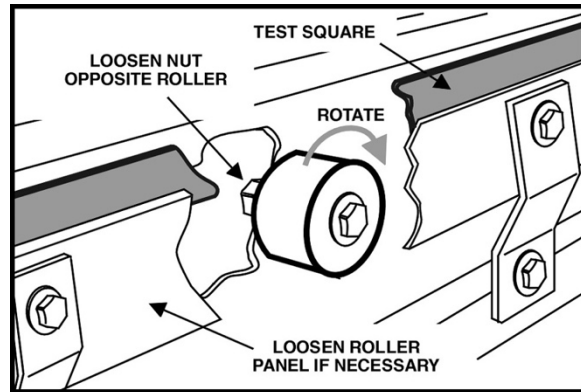


Figure 15

Step 2: Align Guides

⚠WARNING Disconnect saw from power source before aligning the guides.

If the saw does not cut at 90 degrees, the guides may not be perpendicular to the rollers. Adjust as follows:

1. Make sure the rollers are aligned.
2. Remove the blade guard and mark a blade tooth as a reference (NOTE: If the saw has a high-speed steel blade, mark a tooth that points toward the edge of your test square, which is still clamped above the rollers.)
3. Pull the carriage down until the reference tooth of the blade just touches the vertical edge of the test square, Figure 16. Continue pulling the carriage down; if the blade does not contact the square, or the blade binds on the square, the guides are not aligned properly.
4. Loosen the guide bracket nuts, Figure 17, but do not remove the bracket. With a dead blow mallet, strike the bracket on the side in the direction you want the guides to go. **Do not strike the guides.**
5. Confirm the squareness of guides to rollers as described above. When satisfied, re-tighten guide bracket nuts.

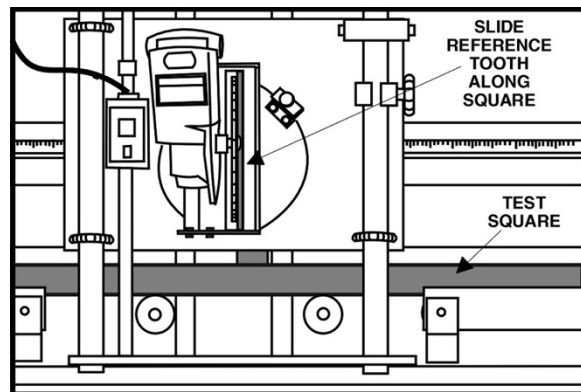


Figure 16

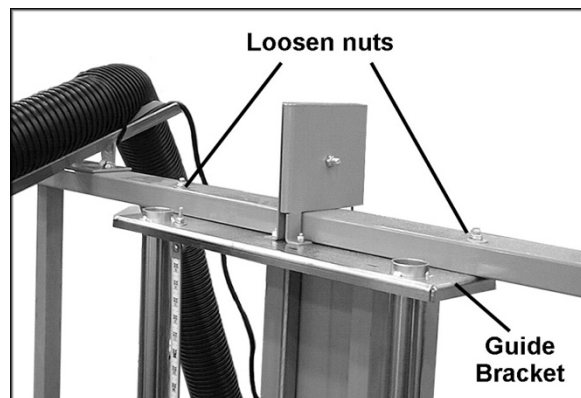


Figure 17

STEP 3: Align Blade Parallel to Guides

The blade must move parallel to the guides or tail burning may occur, and the kerf may be wider than the set of the blade. Always adjust the rollers and guides before adjusting the blade. To check for blade alignment:

1. Make sure rollers and guides are aligned first.
2. If the blade “heels”, or leaves burn marks on the cut, move the carriage to a crosscut position and make a test cut. Examine both sides of the cut to determine which side of the blade is causing the problem.
3. Disconnect power from the saw.
4. Place your test square on the rollers and lower the carriage so the test square overhangs the blade.
5. Place the test square against the blade. The entire face of the blade should contact the test square; if it does not, the blade is in need of alignment.
6. Loosen, but do not remove, the two nuts holding the indexing pin assembly. See Figure 18.
7. If burn marks appear on the *left side* of the workpiece, rotate saw clockwise until entire face of blade contacts your straightedge. If burn marks appear on the *right side* of workpiece, rotate saw counterclockwise until entire face of blade contacts your straightedge.
8. Retighten nuts holding indexing pin assembly.
9. Make a test cut and further adjustments if necessary.

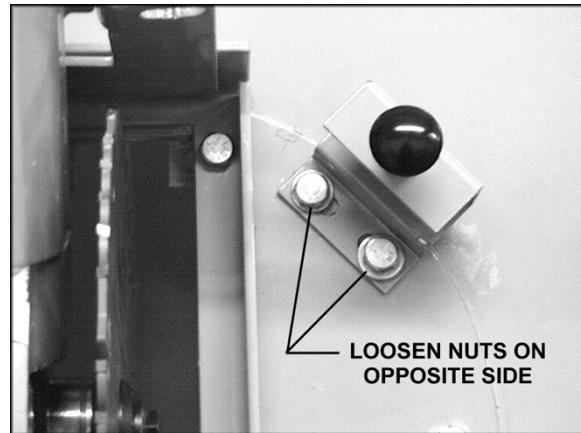


Figure 18

Maintenance

⚠WARNING Always unplug panel saw before performing any adjustments or maintenance. Do not disassemble or do any rewiring to the electrical system; contact a qualified electrician. Always follow proper lockout/tagout procedures during servicing.

Keep the machine in good working order by adopting a routine maintenance program.

Daily:

Use a mild soap and a damp cloth to clean the machine. Before using the saw each time, clean dust from the motor housing vents. Keep the handles clean, dry, and free from oil or grease.

Examine the condition of guards, switches, and power cords. Check for misalignment, binding of moving parts, broken parts, loose screws, and bolts, etc. If vibration or unusual noise occurs, turn off the saw and correct the problem immediately.

⚠CAUTION Do not use cleaning solvents such as gasoline, turpentine, lacquer thinner, paint thinner, or ammonia, as these are harmful to plastic and some of the insulated parts on the machine. Never use flammable or combustible solvents around tools.

⚠WARNING Do not immerse the saw in liquid as this may create risk of injury, electric shock and damage to the saw.

Periodically:

1. The carriage is designed to move smoothly along the guide tubes. If the guide tubes become caked with dust, the carriage may not slide evenly or become stuck. Occasionally clean the guide tubes with a damp cloth and apply a dry lubricant such as a spray silicone.
2. Rotate the motor as shown in Figure 19 and check the motor oil level at the plug. Figure 19 shows the location of the oil plug. If low, fill with SAE 70 or 80 gear oil to proper level. The gear oil should be changed at least once a year, or more frequently if the panel saw receives heavy use.

Every six months:

1. Examine the motor brushes and replace as necessary.
2. Inspect and clean motor.
3. Inspect switch, cord, etc.
4. Test to ensure proper mechanical and electrical performance.

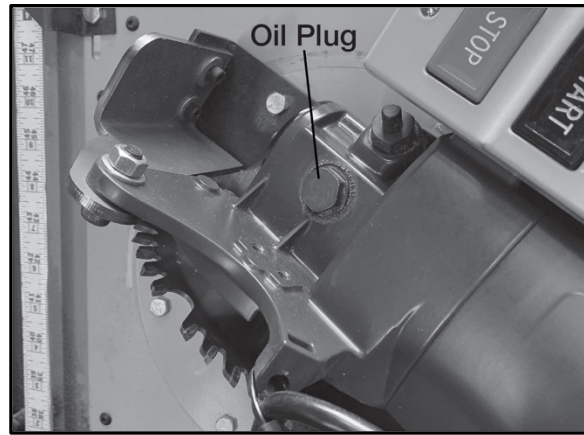



Figure 19

Replacement Parts


Replacement parts are listed on the following pages. To order parts or reach our service department, call 1-800-274-6848, Monday through Friday (see our website for business hours, www.powermatic.com). Having the Model Number and Serial Number of your machine available when you call will allow us to serve you quickly and accurately.

511 Panel Saw – Exploded View I

Refer to parts list, pages 21 and 22.

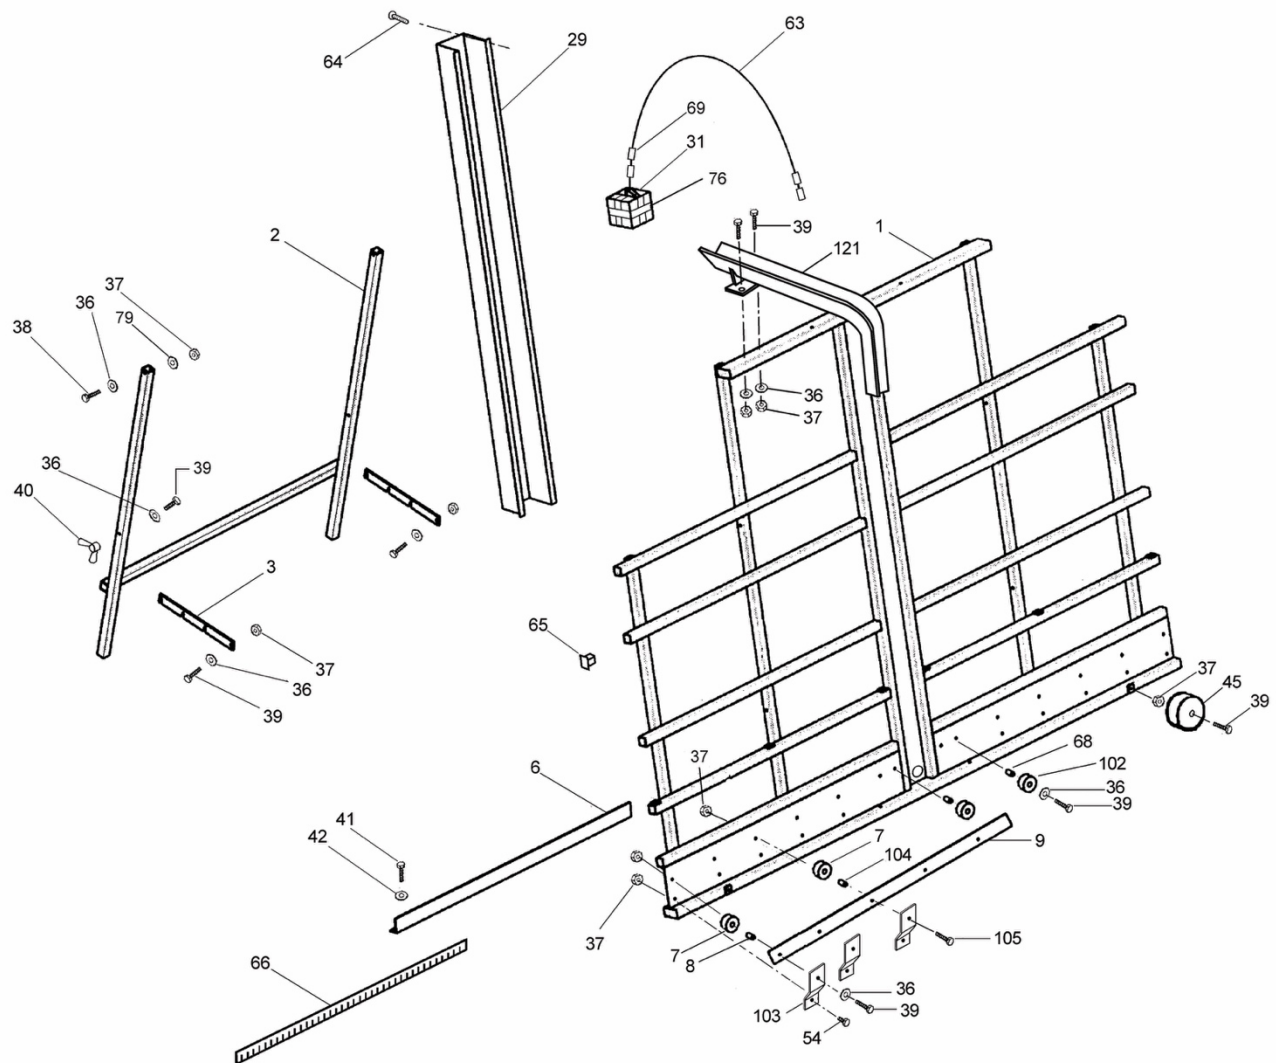

511 Panel Saw – Exploded View II

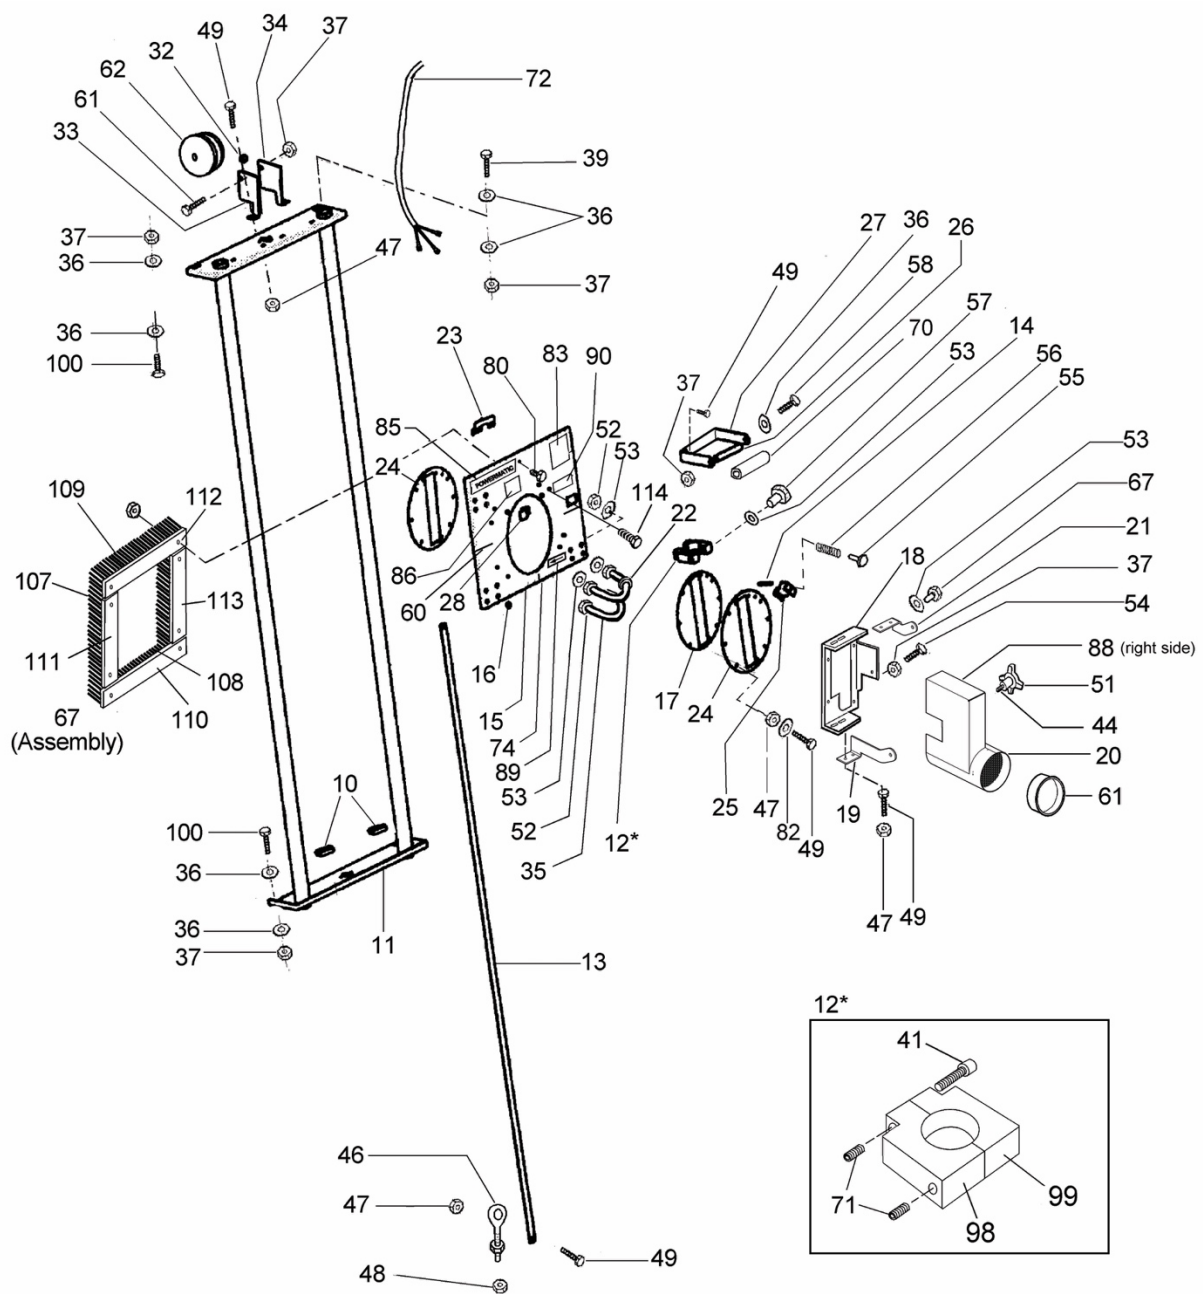

Parts List: 511 Panel Saw


Index No.	Part No.	Description	Size	Qty
	2078021	Carriage Assembly (Items 15, 17 & 24)		1
1	2218033	Frame Assembly		1
2	2423020	Leg Assembly		1
3	3064715	Leg Fold Out Bracket		2
6	3019093	Scale Mounting Angle		2
7	3673091	Panel Roller		10
8	3745052	Roller Bushing		2
9	3578352	Roller Panel		2
10	3575079	Foam Pad		2
11	2253075	Guide Tube Assembly		1
12	3449005	Motor Carriage Lock Assembly (index # 41, 71, 98, 99)		1
13	3596129	Scale Mounting Plate		1
14	3601213	Indexing Plunger		1
15	3079220	Motor Carriage		1
16	3575078	Bearing Wear Pad		1
17	3745049	Rotating Disc Spacer		1
18	3042513	Motor Mounting Base		1
19	PM1-3	Lower Mounting Bracket		1
20	PM1-4	Guard Assembly		1
21	PM1-2	Upper Mounting Bracket		1
22	3046221	Guide Roller		216
23	2750008	Splitter Assembly		1
24	3127019	Rotating Disc		2
25	3064720	Indexing Pin Bracket		1
26	3268220	Pull Handle		1
27	3064750	Handle Bracket		1
28	3326003	Scale Indicator		1
29	3088029	Counterbalance Channel		1
31	3848016	Counter Weight		1
32	3070250	Pulley Bushing		1
33	3064741	Pulley Mounting Bracket (LH)		1
34	3064742	Pulley Mounting Bracket (RH)		1
35	6715289	U-Bolt		8
36	6861301	Flat Washer	3/8	24
37	6516002	Nylon Loc Nut	3/8-16	29
38	6716216	Screw	3/8-16 X 3-1/2	2
39	6716217	Screw	3/8-16 X 2-1/2	12
40	6516028	Wing Nut	3/8-16	2
41	6715020	Socket Head Cap Screw	5/16-18 X 1	6
42	6861200	Lock Washer	5/16	15
44	6715017	Socket Set Screw	5/16-18 x 1	1
45	6108003	Caster	4"	2
46	6714270	Eyebolt	1/4-20 w/ Nut	2
47	6514022	Nylon Loc Nut	1/4-20	2
48	6514011	Jam Nut	1/4-20	1
49	6714269	Hex Head Screw	1/4-20 X 3/4	4
51	80-3133	Knob		1
52	6515001	Hex Nut	5/16-18	16
53	6861201	Flat Washer	5/16	18
54	6716030	Screw	3/8-16 X 3/4	14
55	6430052	Knob		1
56	6813142	Spring		1
57	6430050	Locking Knob		1

Index No.	Part No.	Description	Size	Qty
58	6716218	Hex Head Screw	3/8-16 X 5	1
60	6823020	Indicator Stripe		2 inches
61	3598060	Tapered Plug		1
62	6646048	Counterbalance Pulley		1
63	6102053	Nylon Coated Cable		1
64	6710154	Self-Tapping Screw	#10-24	6
65	6640017	Tubing Plug		18
66	6687015	Tape Scale		2
67	3069021	Carriage Brush Assembly (Index # 107 thru 113)		1
68	3076230	Roller Cam		4
69	6284104	Cable Fitting		4
70	6330009	Grip Foam Handle		1
71	6400012	Insert Threaded w/Flange	5/16-18	2
72	6164014	Cord		1
73	JT9-1510009	Motor, 3-HP, Worm Drive		1
74	6811286	Shim		4
75	JT9-6821497	Pushbutton Switch		1
76	6823018	Poly Tape		5 ft.
77	JT9-F009884	Socket Head Button Screw	M5 x 8	1
79	6861323	Nylon Washer	3/8 x 1 x 1/16	2
80	6714167	Hex Head Screw	1/4-20 x 7/8 Lg	1
81	CM9-6930004	Connector Duplex		1
82	6861101	Flat Washer	1/4	1
83	3408265	Warning Label		1
85	3312339	Label, Logo		1
86	3119080	Label, American Flag		1
88	JT9-3408248	Label, Blade Rotation/Blade Size		1
89	3408266	Label, Directional Arrow		1
92	TS-1490021	Hex Head Cap Bolt	M8-1.25 x 16	1
93	6860802	Washer	#10	2
94	JT9-3856318	Ground Wire with Ring Terminals (L510)		1
95	PM1-7	Ground Screw	M5 x 15	1
97	6286447	Lock Washer	1/4	3
98	3449006	Lock w/ Inserts (6400012)		1
99	3449007	Lock		1
100	6716124	Hex Head Screw	3/8-16 x 2-1/2 Lg	4
102	3673092	Roller	1-1/2 wide	4
103	3064743	Support Bracket		10
104	3076235	Roller Cam		8
105	6716043	Hex Head Screw	3/8-16 x 2-3/4	10
106	PM1-32	Motor w/ Pushbutton Assembly		1
107	3069022	Side Brush		2
108	3069023	Top Brush		1
109	3069024	Bottom Brush		1
110	3069025	Bottom Brush Holder		1
111	3069026	Left Side Brush Holder		1
112	3069027	Top Brush Holder		1
113	3069028	Right Side Brush Holder		1
114	6710063	Button Socket Head Cap Screw	#10-24 x 1/2	8
115	6510015	Hex (Nylon) Lock Nut	#10-24	8
116	JW1032	Hose	4"	1
117	6940064	Cable Tie		7
118	JW1317	Hose Clamp	4" (2-Ring)	1
119	JW1015	Y Fitting	4"	1
120	JW1022	Hose Clamp (Worm Drive)	4"	4
121	3064748	Hose Bracket		1
122	JT9-6821498	Ground Kit		1
123	JT9-6860801	External Tooth Washer	#10	1
	PM1-61	Motor Retrofit Kit (not shown)*		1

• Motor retrofit kit for panel saw serial numbers lower than 03102023001


511 Panel Saw, Motor with Pushbutton Assembly, Part No. PM1-32

Refer to parts list, pages 21 and 22.

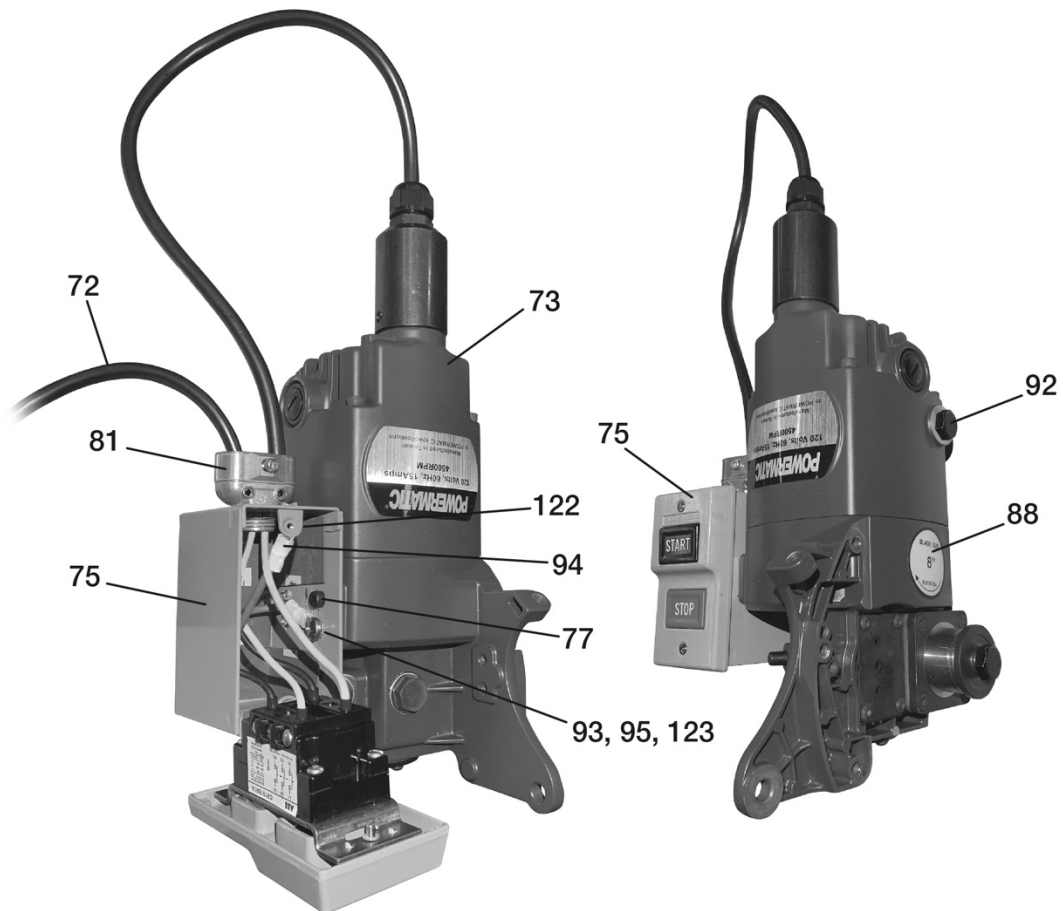


511 Panel Saw Dust Collection System

Refer to parts list, pages 21 and 22.

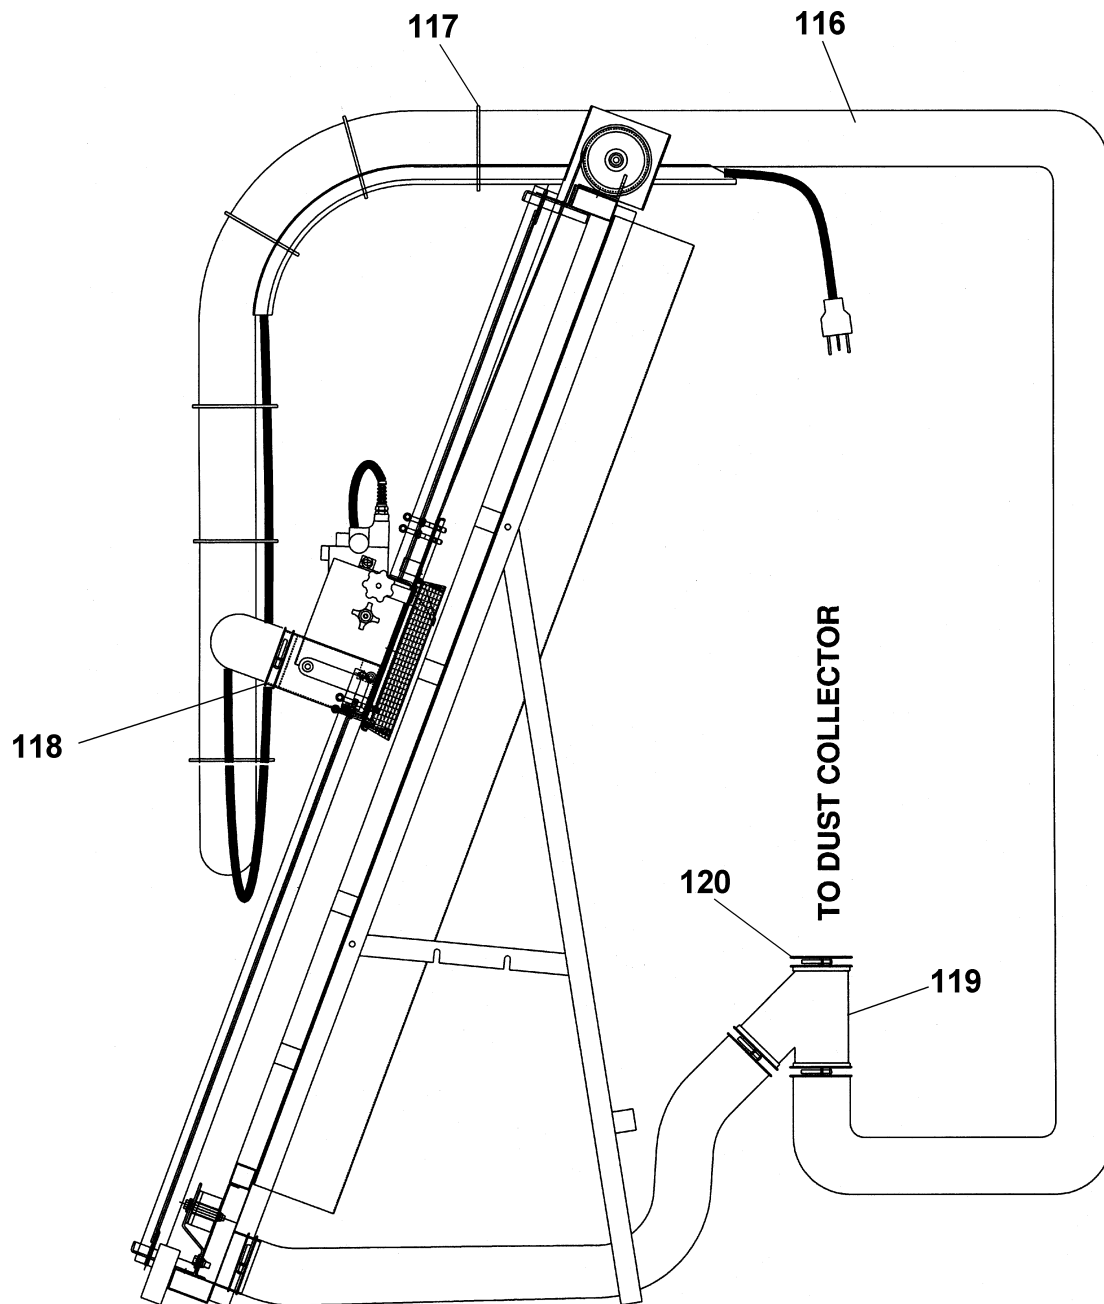

Electrical Connections

Refer to parts list, pages 21 and 22.

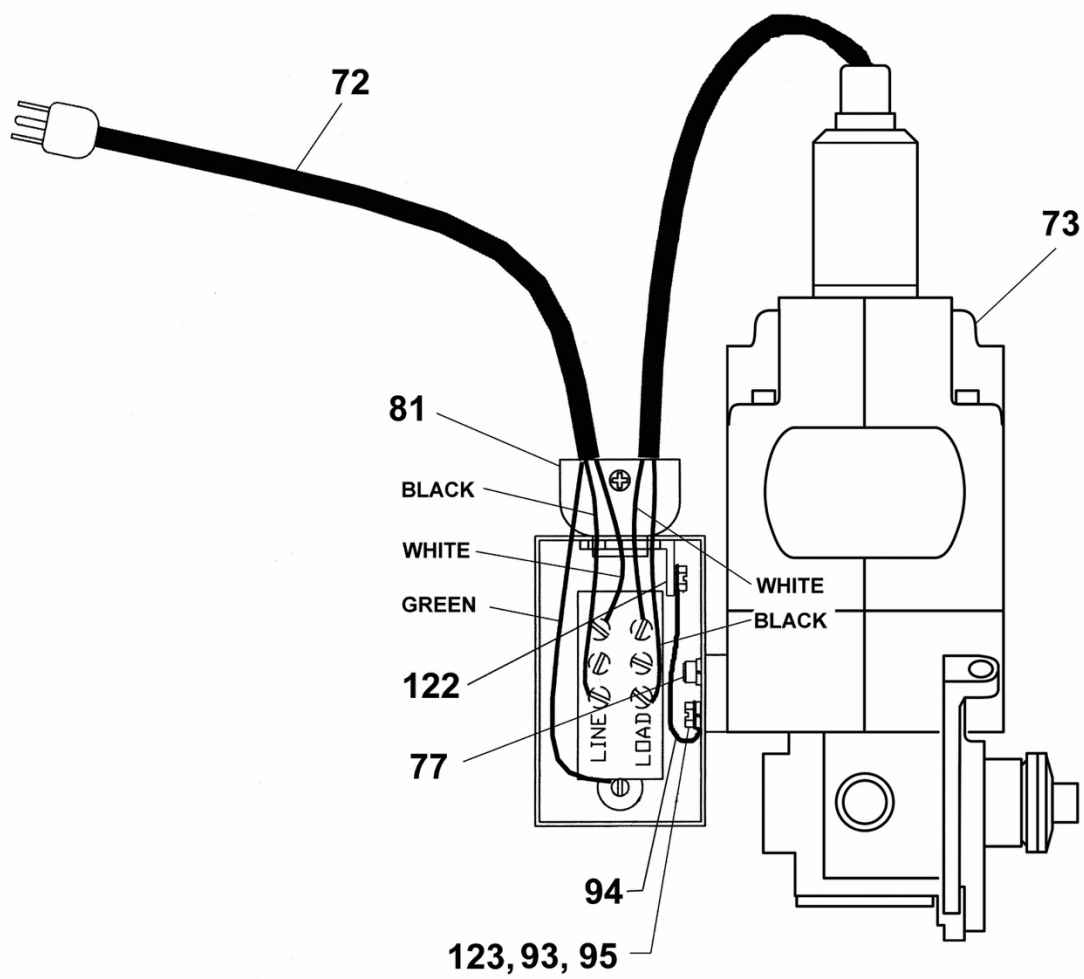


Parts List: Motor Assembly

Index No	Part No	Description	Size	Qty
1	JT9-1510009	Motor Assembly		1
2	JT9-1510009-104	Arbor Screw	M10 x 1.25P x 20L (L.H. Thread)	1
3	JT9-1510009-105	Arbor Outer Washer		1
4	JT9-1510009-103	Arbor Inner Washer		1
5	JT9-1510009-102	Brush Cap		2
6	JT9-1510009-101	Brush		2
	PM1-61	Motor Retrofit Kit (not shown)*		1

• Motor retrofit kit for panel saw serial numbers lower than 03102023001

⚠ WARNING Electrical repairs should be attempted only by trained personnel.

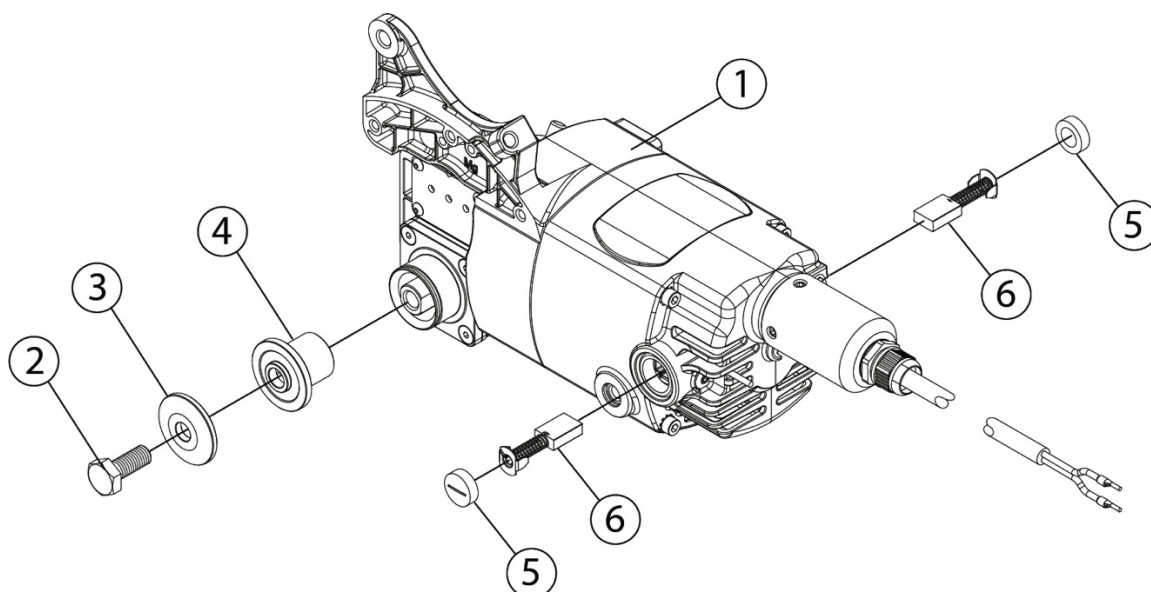



427 New Sanford Rd.
LaVergne, TN 37086
Phone: 800-274-6848
www.powermatic.com